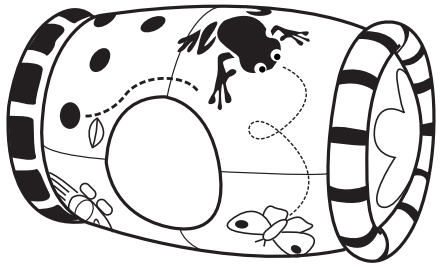

Musical Roller

Owner's Manual

WARNING

For your child's safety. Please read these instructions and keep for future reference.

To prevent the risk of strangulation: Do not attach strings or straps to the toy.

- Toy must only be used under adult supervision.
- Remove and discard all packaging and packaging fasteners before giving this toy to a child.
- Do not use the product if any components are broken or missing or if the toy deflates quickly.
- Before each use, ensure that the product and all its components are not damaged. If damaged or broken, immediately discard the toy.
- Do not inflate using high-pressure pumps or compressors etc. Inflate the toy by mouth or with a hand- or foot-operated pump.
- This toy must only be used on the floor.
- Do not allow use of this toy on streets, driveways of access or slopes; make sure that the toy is used in area free from obstacles and far from dangerous places (swimming pools, canals, lakes, staircases etc.).
- This product is not a water toy or a floatation on device.
- Keep the product far from heat sources to prevent the risk of overheating and explosion.

For More Information

If you have any questions or comments about this product, or are missing any of the parts, please contact us in one of the following ways:

(877)-424-4226

info@chiccousa.com

www.chiccousa.com

1826 William Penn Way
Lancaster, PA 17601

Cleaning

- Use a soft damp cloth to clean the toy. Do not submerge the toy in water, in order prevent damage to its electronic circuit.
- Protect the toy against heat, dust, sand, and water.

©2011 Artsana USA, INC. 11/11

1

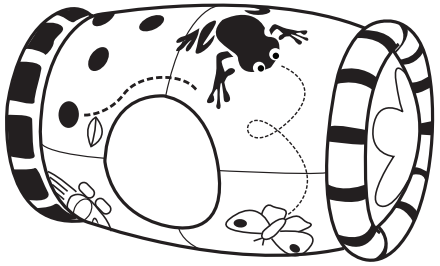

1. The inflatable, musical roller stimulates the child to move to the rhythm of the music . Press the button and listens to fun melodies and 5 colorful balls bounce inside the roller making a tinkling sound.

- To inflate the product, blow air through the valve at the side of the tube and keep on inflating, until the toy is fully inflated.
- After inflating the toy, close the valve and push it inside the tube until it is level with the toy surface.
- If the toy is inflated by mouth, water vapor may collect inside the product; the vapor will evaporate in about 30 minutes.
- To activate the melodies, press the button on the surface.
- The toy contains 2 non-replaceable button cells type LR41.

FCC Information

Caution: changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

chicco

www.chiccousa.com